


WE'RE MAKING ONLINE ORDERING EASIER THAN EVER!



- create a username & password
- enter & save your facility's information
- receive an email back of acceptance
- log in and add items
- add all of your favorites or let us load them up for you
- items are grouped by category for faster & easier ordering

CALL US TO HELP YOU SET UP YOUR ACCOUNT TODAY!

FERNO® MODEL 24 MULTI-LEVEL, ONE MAN®

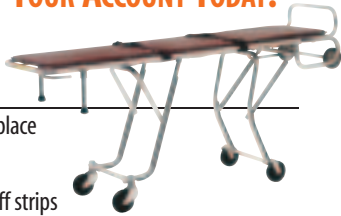

- allows portable stretcher to lie evenly in place
- allows one person to perform retrieval; highly maneuverable in confined areas
- equipped w/release levers, posts, and scuff strips
- load-end legs unfold and lock automatically when unloading cot
- includes one-inch burgundy mattress and two five-foot-long, two-piece burgundy, quick-release restraining straps; also available w/optional sidearms and/or wheel locks
- 77" L X 20-1/2"W; max load 400 lbs

F24 Ferno® Model 24 Mortuary Cot **\$2,121.60 ea**

FERNO® MODEL 24-MINI-MAXX HEAVY DUTY

- same features as model 24
- 1000 lb. load capacity allows the handling of large bodies with ease
- 77" L x 22-3/4"W; min 14" H to max 39" H; load height 26"; max load - 1,000 lbs

F24MINIMAXX Ferno® Model 24 MiniMAXX **\$2,691.78 ea**

FERNO® MODEL 34 FOLDING DRESSING TABLE



- two-piece, laminated top resists scratches/stains, can be cleaned in seconds
- four, six-inch swivel wheels equipped with locks
- 76" L x 24-1/2"W; max load - 500 lbs
- also available: oversize 76" L x 29"W dressing table and replacement tops in both standard and oversize

F34-Gray Ferno® F34 Folding Dressing Table w/gray top **\$1,427.40 ea**

SMC BLUE PF LATEX GLOVE

Best Seller!

- 15 mil • extended 12" cuffs
- high tensile strength
- fully textured • non-sterile
- improved dispenser box • packaged 25 pr/bx, 10 bxs/cs

SMCB S - XL **\$126.00 cs**



SMC PRO/SHIELD ANKLE HIGH SHOE COVERS

- impervious fabric, skid resistant soles
- serged seams with elastic at opening
- 100/pr/cs • one size fits all

SMC005NS shoe covers **\$101.00 cs**



SMC PRO/SHIELD HIGH TOP BOOTS

- impervious fabric, skid resistant soles
- tear-proof knee protection
- 50 pr/cs • fits up to men's sz 13

SMC10423 high top boots **\$119.00 cs**



WASHABLE COMFORT EASE™ UNISEX SCRUBS

- 65% polyester 35% cotton ComfortEase™ fabric
- available in: S-3XL, 11 colors; 4x and 5x, 5 colors (call for details)

M910 - ONE-POCKET SCRUB TOPS

- v-neck, reversible pullover top
- S-XL **\$14.25 ea**
- 2XL **\$17.25 ea**
- 3XL **\$18.95 ea**

M900 - DRAWSTRING SCRUB PANTS

- reversible drawstring pants w/matching ties
- S-XL **\$17.25 ea**
- 2XL **\$18.00 ea**
- 3XL **\$25.75 ea**



SMC SPECIALTY GOWNS

- impervious film on front and sleeves
- simulates a gown/apron combination
- Velcro neck closure, side tie and knit cuff
- packaged 60/cs

SMC135SM S/M **\$252.00 cs**
SMC135L L **\$270.00 cs**
SMC135XL XL **\$285.00 cs**
SMC135XXL 2XL/3XL **\$299.00 cs**

- 10" longer with extended reinforcement

SMC140XL XL **\$299.00 cs**
SMC140XXL 2XL/3XL **\$314.00 cs**



SMC FABRIC REINFORCED GOWNS

- cool breathable material
- internal fabric reinforced chest and sleeves
- generous raglan sleeves
- tie back, and knit cuffs • packaged 60/cs

SMC110SM S/M, Velcro neck **\$252.00 cs**
SMC110T-L L, tie neck **\$266.00 cs**
SMC110XL XL, Velcro neck **\$285.00 cs**



POLY THUMBHOLE OPEN BACK GOWNS

- impervious polyethylene construction
- thumbhole sleeves for easy donning
- pullover, tie back with tapered wrist and elastic to ensure better fit

WK8572B L, elastic wrist, 100/cs **\$110.00 cs**
51575 L, tapered wrist, 75/cs **\$80.75 cs**
51576 XL, tapered wrist, 75/cs **\$85.50 cs**



EVOLUTION INJECTOR™ BY INSTRUMENT DESIGN & MFG. CO



Quick release bottle attachment for easy bottle installation and removal.



Prepare multiple bottles of fluid for use at one time.

The Evolution Injector™ combines a chemical cavity injector and Comfort Grip Trocar™ in one new product. Designed to bring the process down to one hand for advanced maneuverability.

With the Evolution Injector™, embalming has never been easier. Simply remove the cavity injector with the click of a button and screw it onto your solution bottle. Attach the bottle to the Evolution Injector™ and you're ready to go!

CCI-EI18-7 7" Evolution Injector™ **\$175.00 ea**

- includes 1 bottle adapter
- compatible with most 16oz. bottles, from 7-3/8" to 8-1/2"
- measured to top of neck without cap



1. Lightly coat o-ring on CCI bottle adapter with lubricant. Insert CCI bottle adapter into Evolution Grip until locked in place. Be sure to place CCI vent button on desired side, based on personal preference whether right or left handed.
2. Place an uncapped bottle of cavity fluid on table, insert CCI vent tube down into bottle and twist bottle until securely attached.
3. With bottle and CCI bottle adapter securely attached, grasp the Evolution Injector by the grip and neck of the bottle keeping the bottle vertical, below the hand grip.
4. Remove the safety cap from trocar point at this time.
5. Insert trocar shaft into desired location of the body cavity while keeping the bottle vertically below grip.
6. When ready to begin injecting the cavity, rotate bottle to the vertical position above grip.
7. Use the vent button to control the flow. Covering the vent with your thumb will stop the flow.